

www.SpellBrite.com

Thank you for purchasing your SpellBrite™ Center Support Kit. Please follow the instructions below and contact your sign retailer or SpellBrite® Signs directly at info@SpellBrite.com or (312) 568-5760 if you have any questions.

Determine the Appropriate Number of Center Supports

Use the adjacent chart to determine the number of center supports suggested for a sign containing the listed number of characters in one continuous row. Add extra center supports as necessary for windy or high traffic locations, for example, near the front door of a restaurant.

# of SpellBrite Characters On One Continuous Row	Suggested # of Center Supports
01-12	0
13-18	1
19-24	2
25-30	3


Determine the Center of Your Sign

To install one center support, build your SpellBrite™ sign and find the horizontal center of the sign using a tape measure. Next, identify the letter to letter joint closest to the center of your sign. This is where you will install your SpellBrite™ Hang Tab on the top rail. The sign shown below is a 16 character sign. The suggested chain support points are identified by the black hooks (16 characters = 1 center support). If installing multiple center supports, space the center supports equally along the length of the sign.



Install Your Hang Tab(s) and Hang Your Sign

Step 1

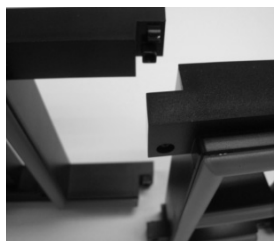


Unscrew your sign at the location(s) you've chosen to install the center support(s). Leave the rest of your sign fully assembled.

Step 2



Stand your sign on a flat, solid surface. Slide the Hang Tab onto the male side of the connection area (The side containing the connection screw).

Step 3

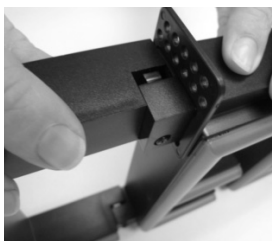

Click the letters together while standing sign on end. The Hang Tab is now fully captured on the top rail. Screw the letters together to complete sign assembly.

Step 4



Hang your sign. For proper support, make sure the center chain(s) are taut. If center chain(s) are loose, use the bottom holes on the Hang Tab, bend the hooks or remove a chain link.

Step 5



Using the Hang Tab, you can adjust the pitch angle of your sign. Use the back holes to point your sign down (Shown above). Use the front holes to point your sign up.

QUESTIONS: Please contact your sign retailer or contact SpellBrite® Signs directly at info@SpellBrite.com or (312) 568-5760.